




SALES (INSERT CARD)

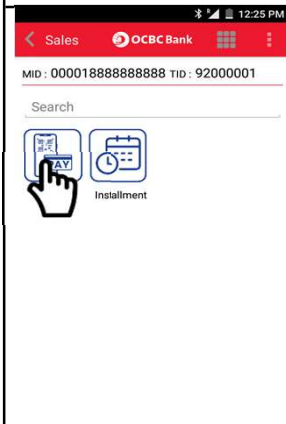


1. Tap on Payment icon

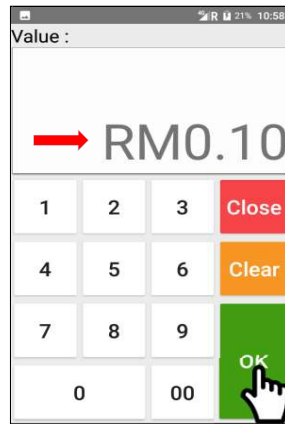


2. Key in sale amount and tap <OK>

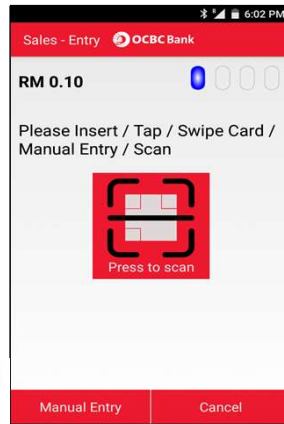


3. Wave card or insert payment card

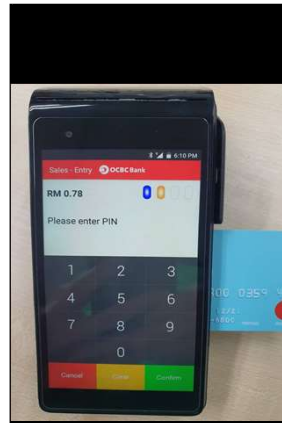


4. Insert payment card

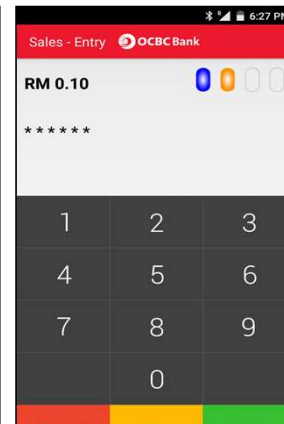

5. Key in 6 digit of PIN numbers and press <ENTER>.

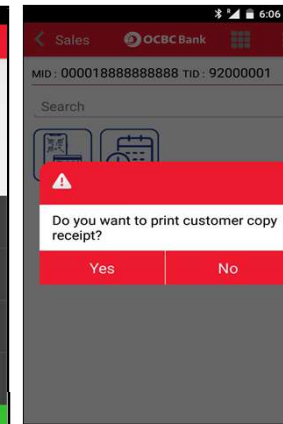


6. Press <Yes> for Customer copy receipt.

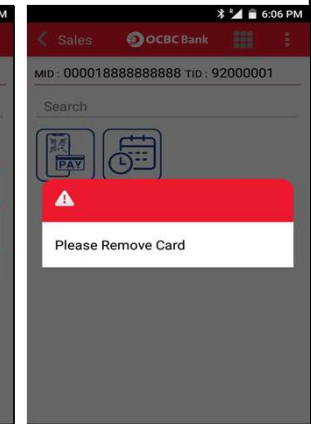


7. Remove card (For Chip Transaction)


SALES (CONTACTLESS)

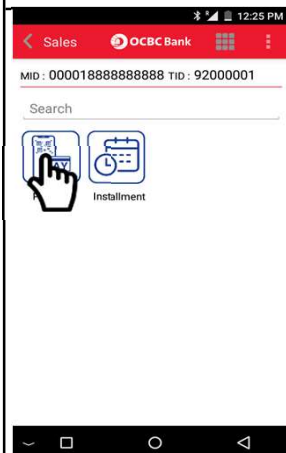


1. Tap on Payment icon

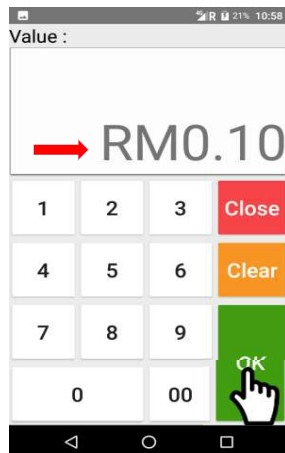


2. Key in sale amount and tap <OK>

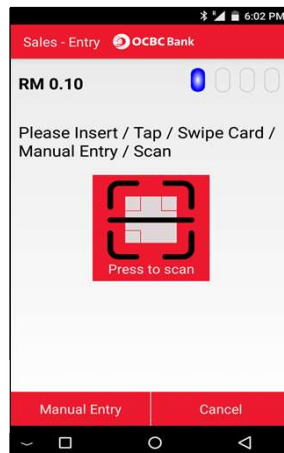


3. Wave card or insert payment card

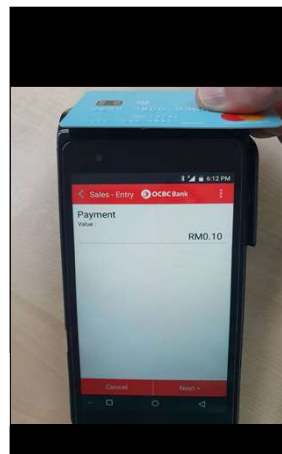


4. Wave payment card

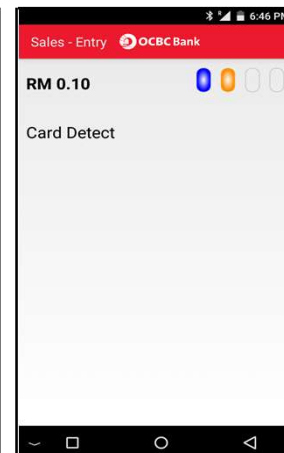

5. Payment card detected

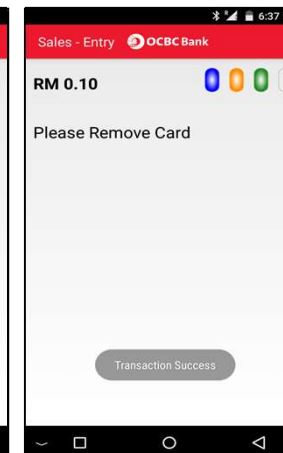

6. Transaction approved and print merchant copy receipt

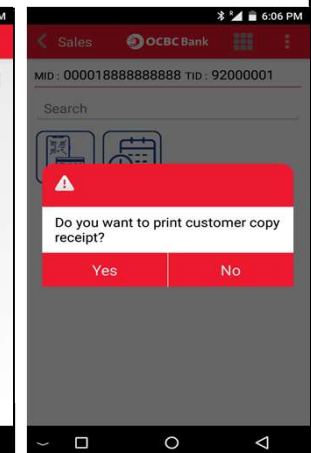

7. Press <Yes> for Customer copy receipt.