

 


TERMINAL USER GUIDE

MyDebit CashOut


GHL MAH DA

Terminal Model: Nexgo N86

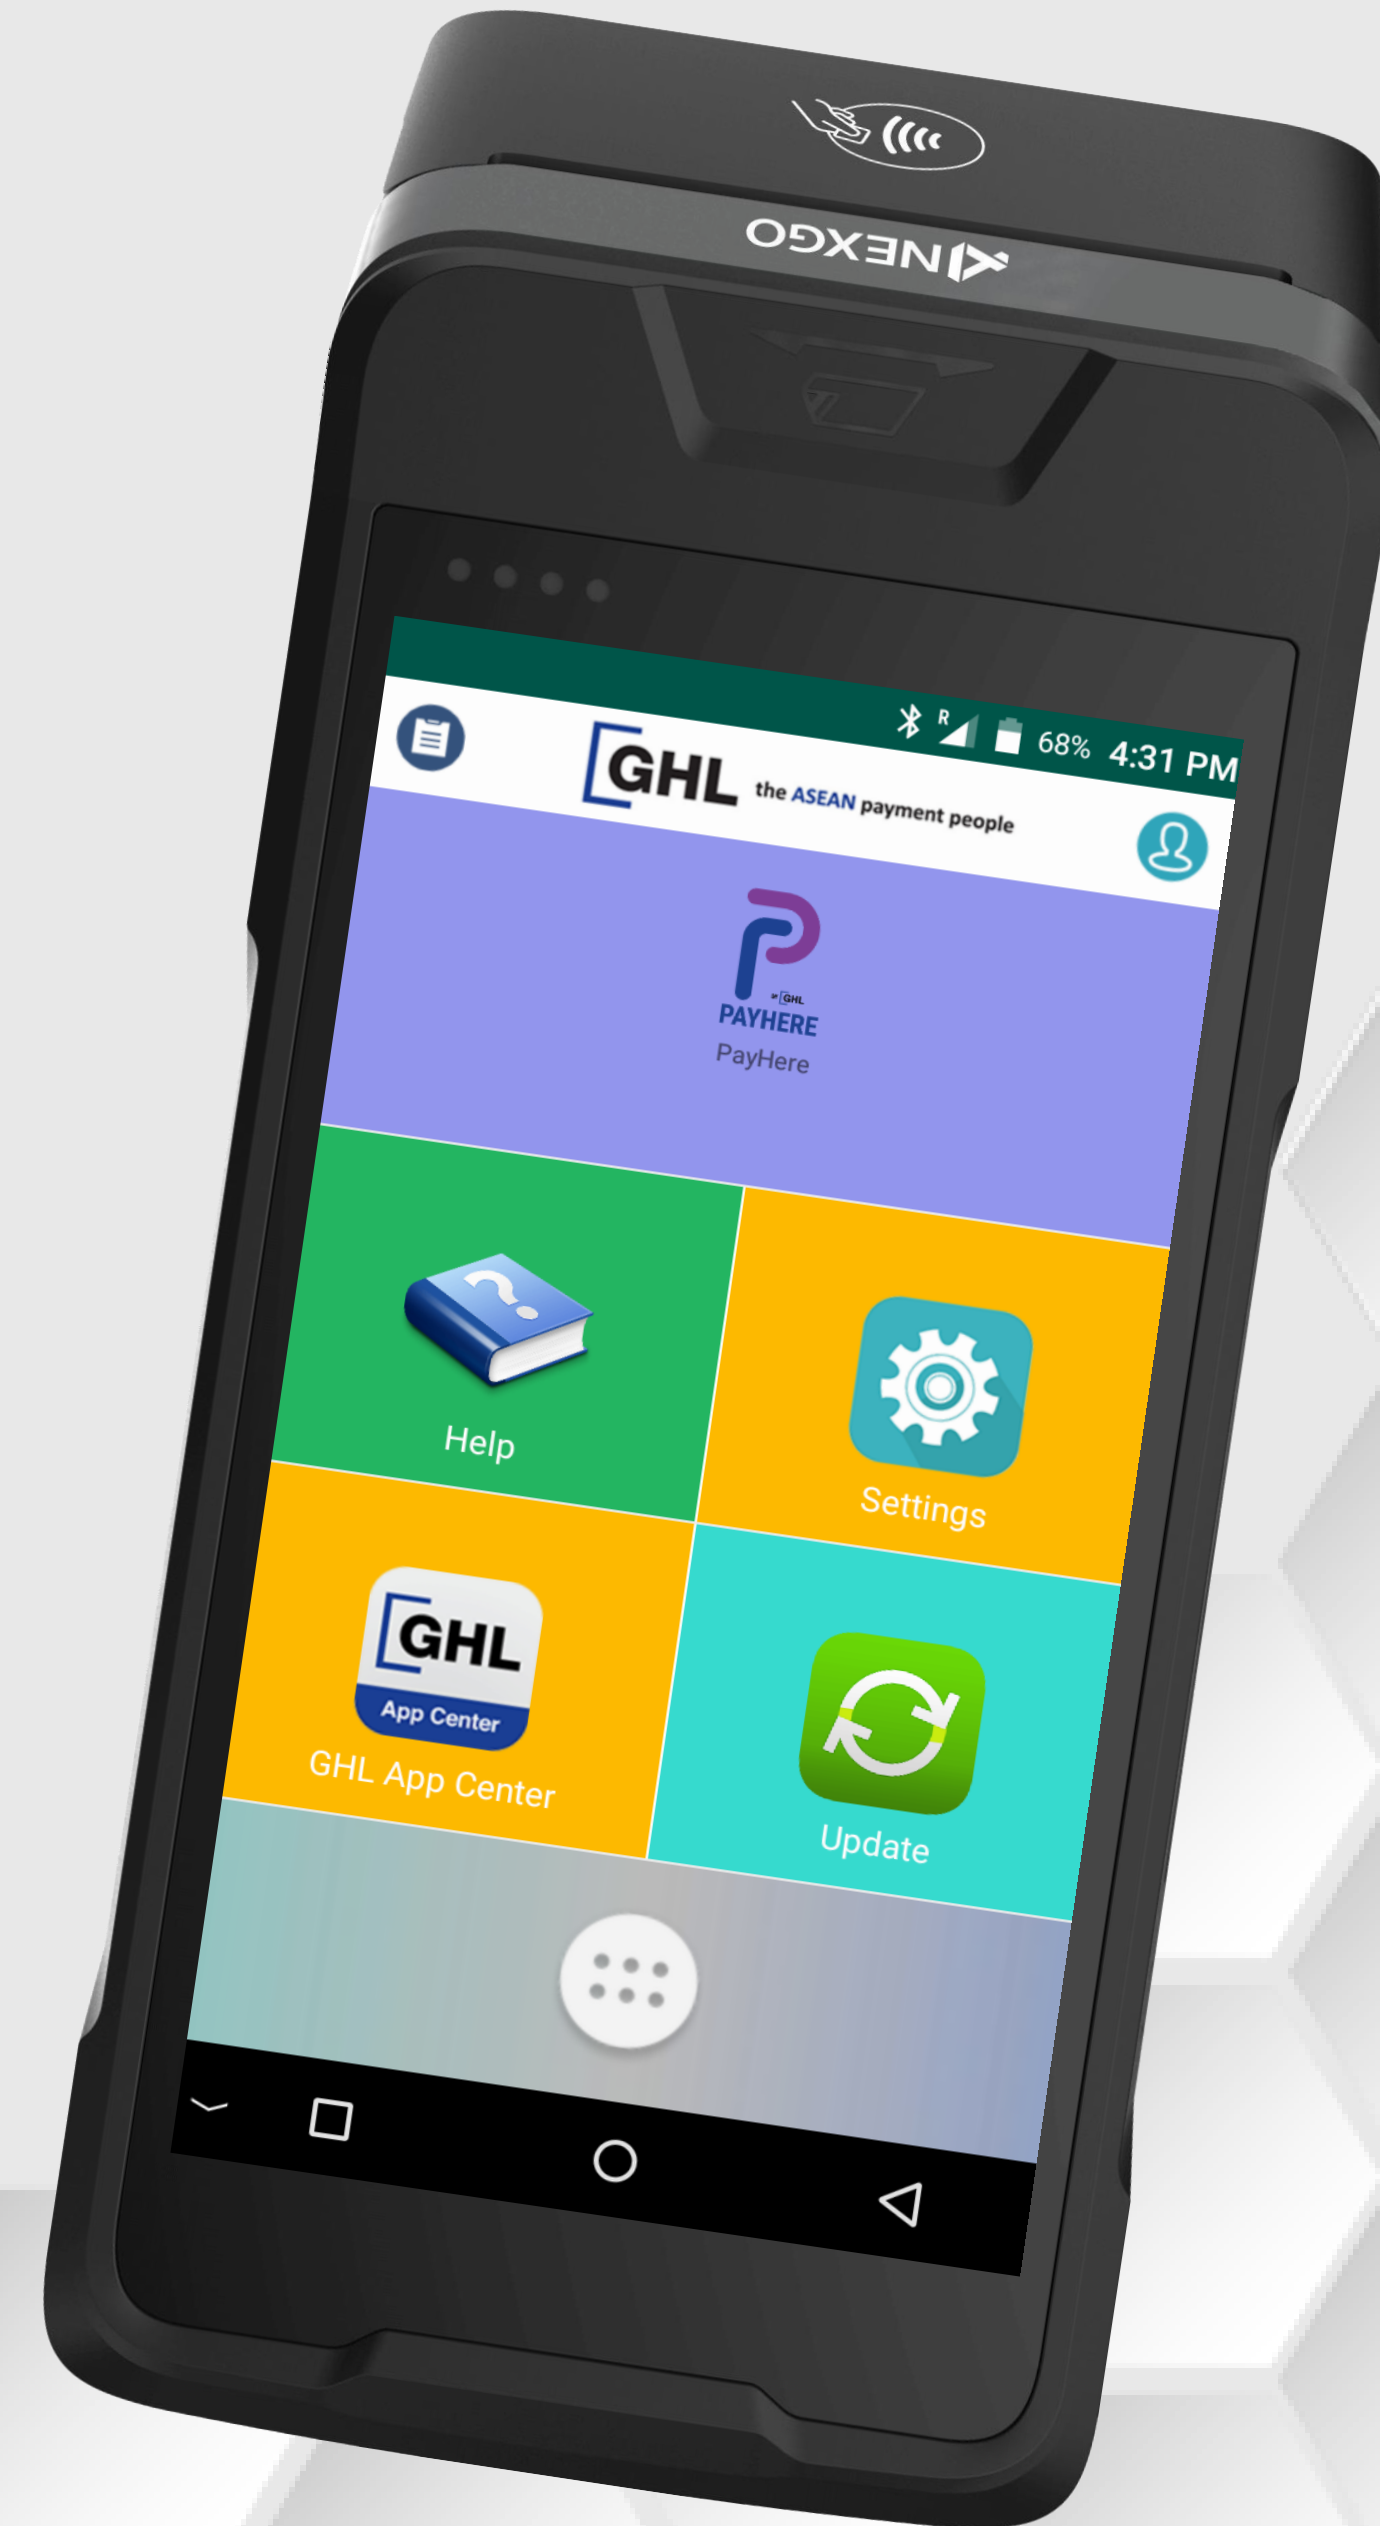


MyDebit CashOut | Sale

 Terminal Model: Nexgo N86

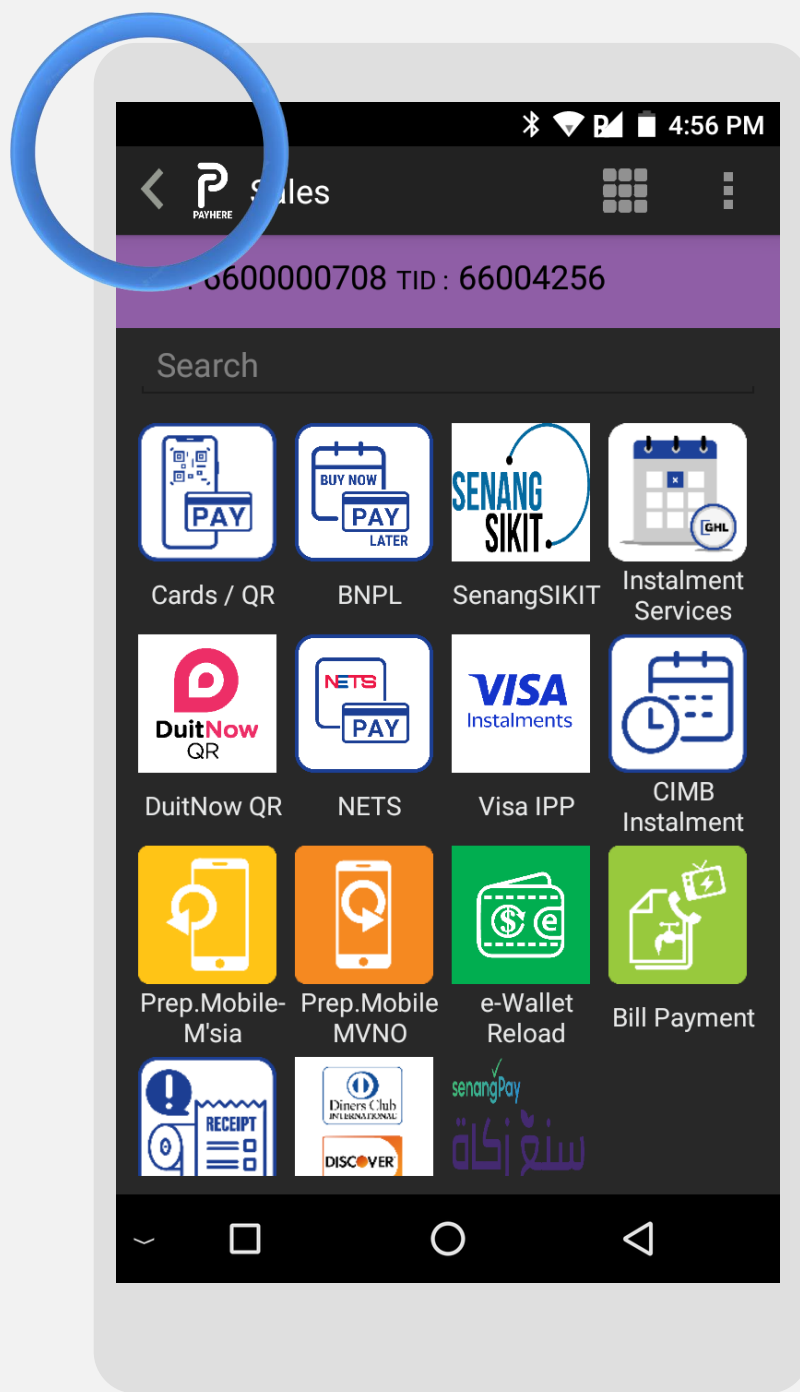


STEP
1

 Press on < icon to open side menu

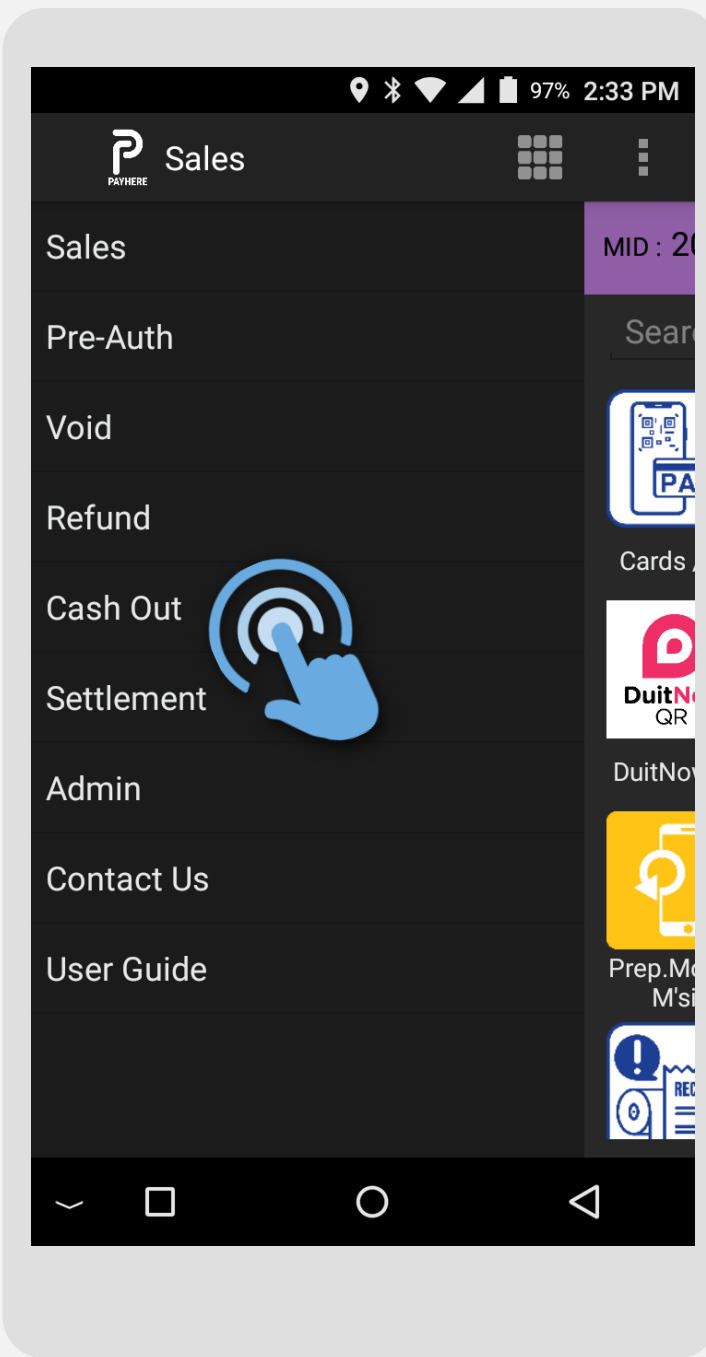


STEP
2

 Press **Cash Out**

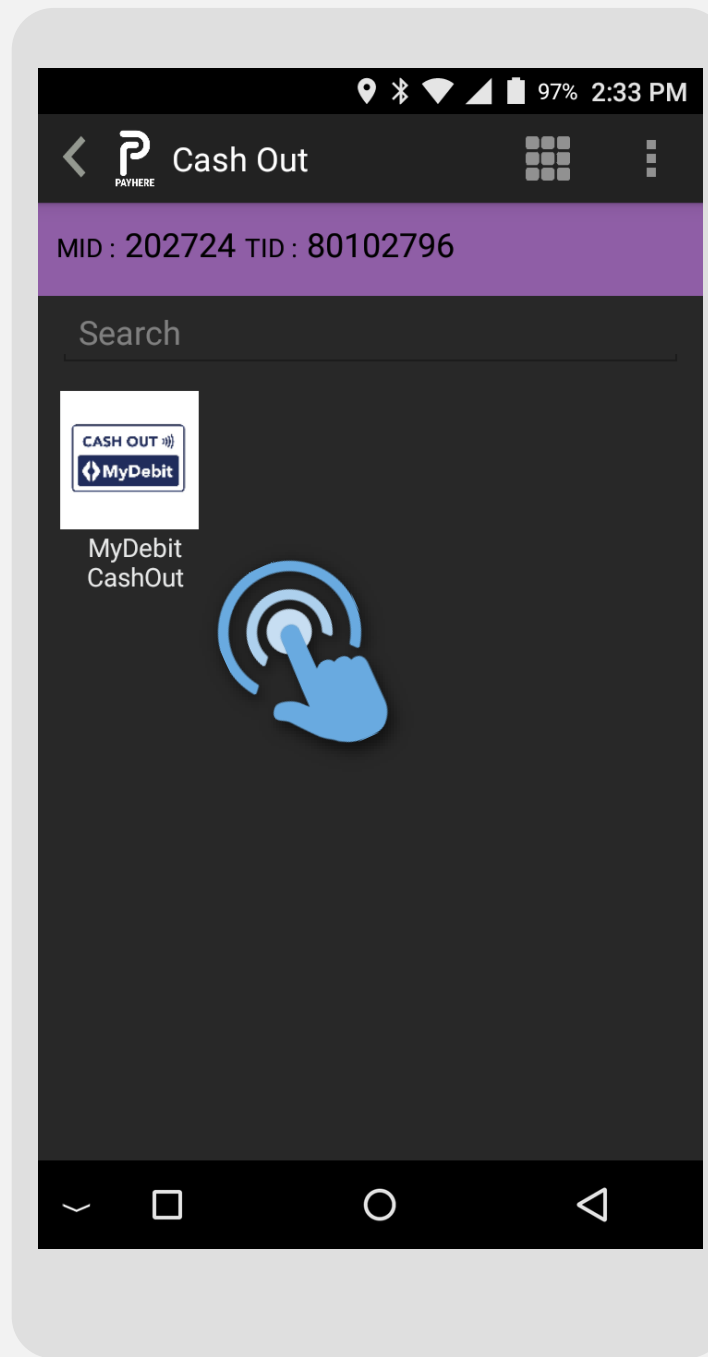


STEP
3

 Select **MyDebit CashOut**

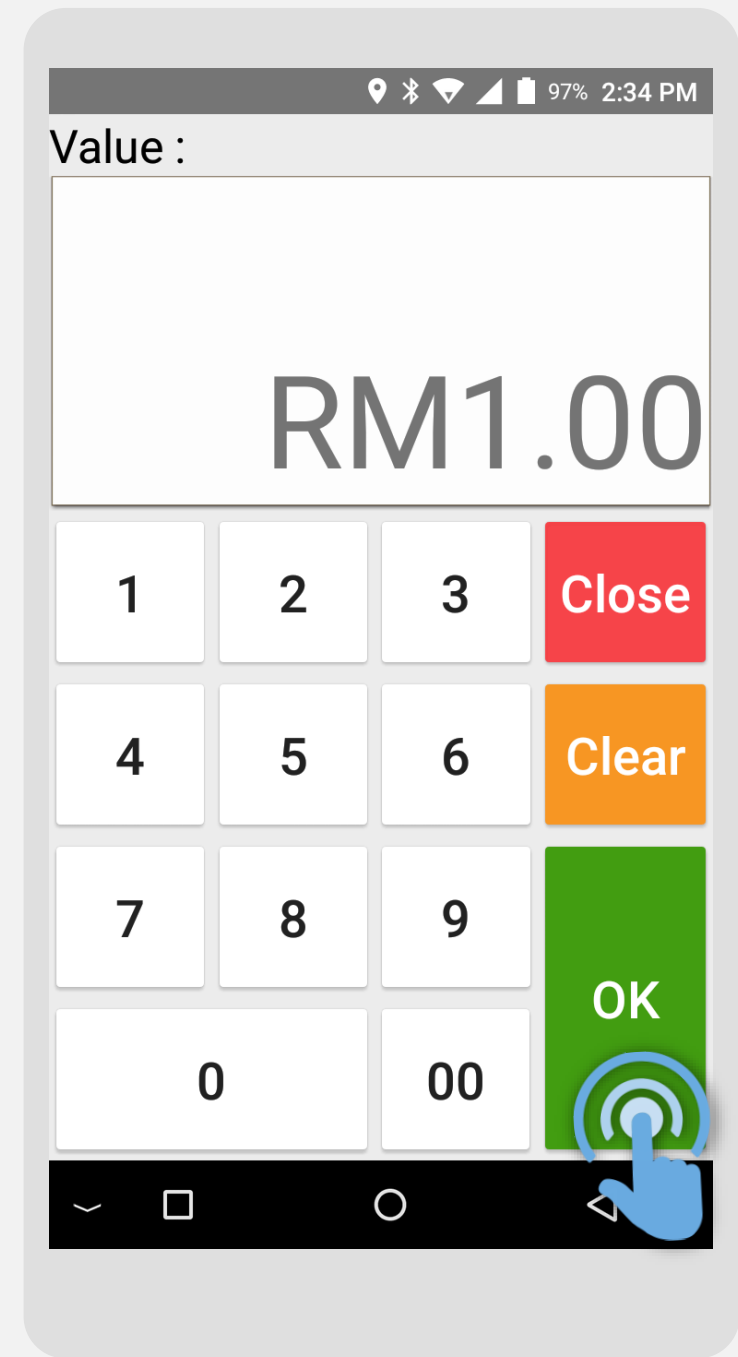

STEP
4

 Key-in fee/charge amount & press **OK**

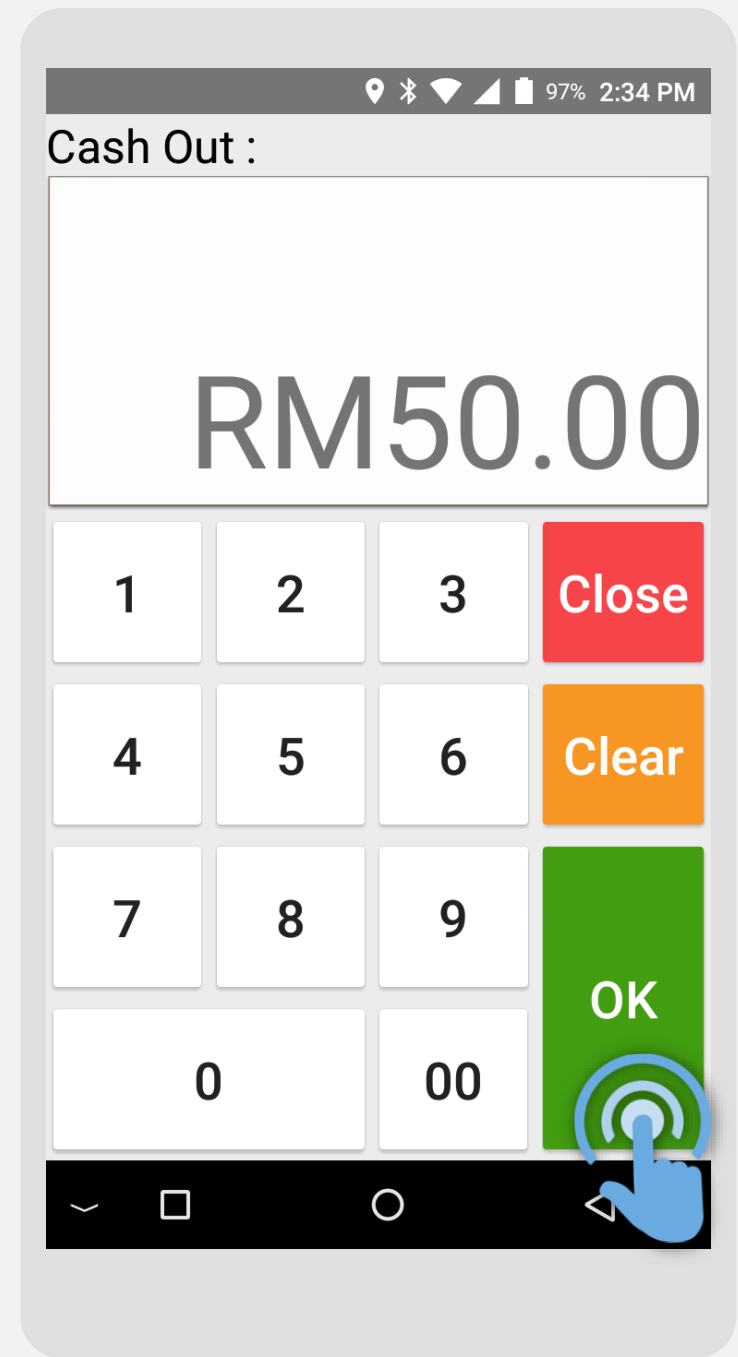


STEP
5


Key-in MyDebit CashOut amount & press **OK**

MyDebit CashOut | Sale

 
Terminal Model: Nexgo N86

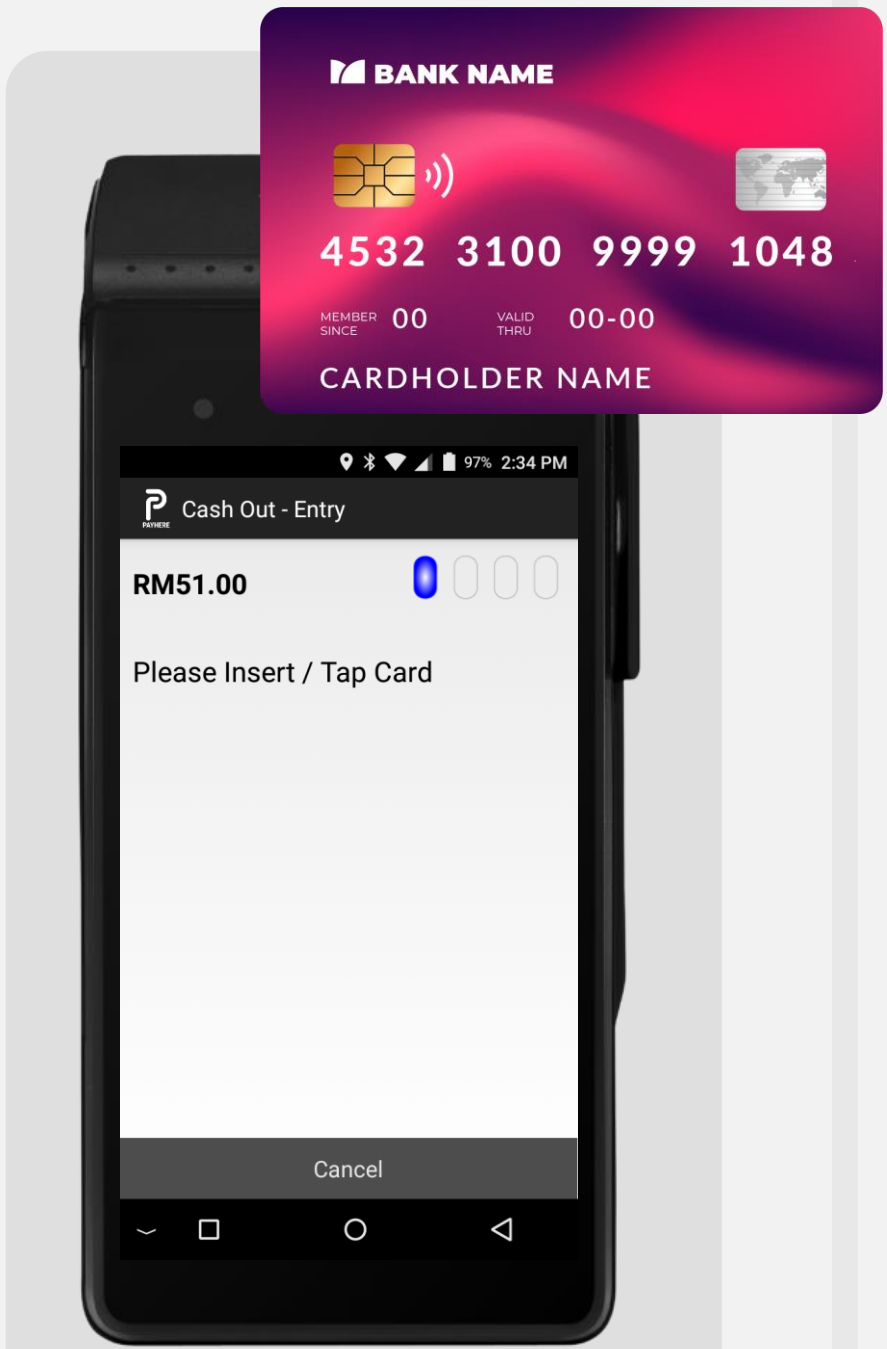

 
STEP
6
Tap or insert the Card

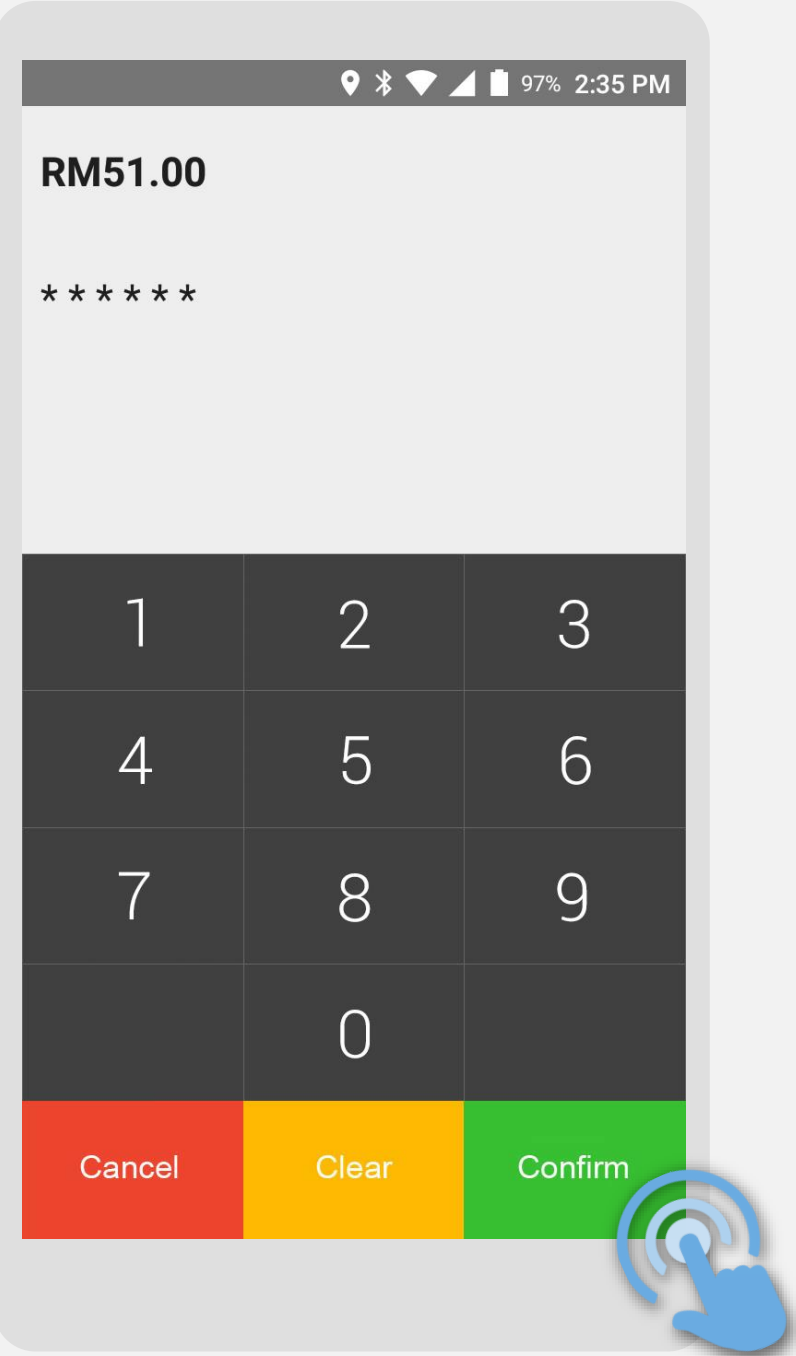

 STEP
7
Key-in Debit Card password and press **Confirm**

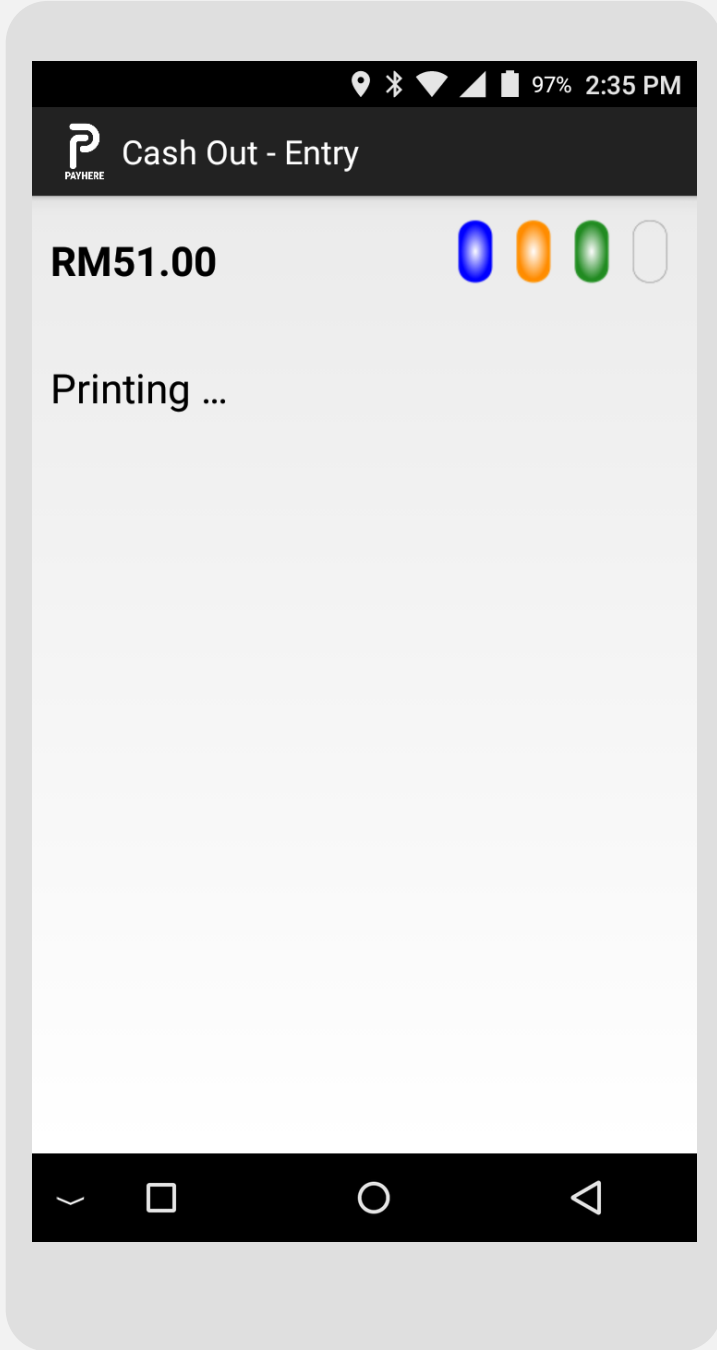

 STEP
8
Once transaction is successful, merchant receipt will printed out

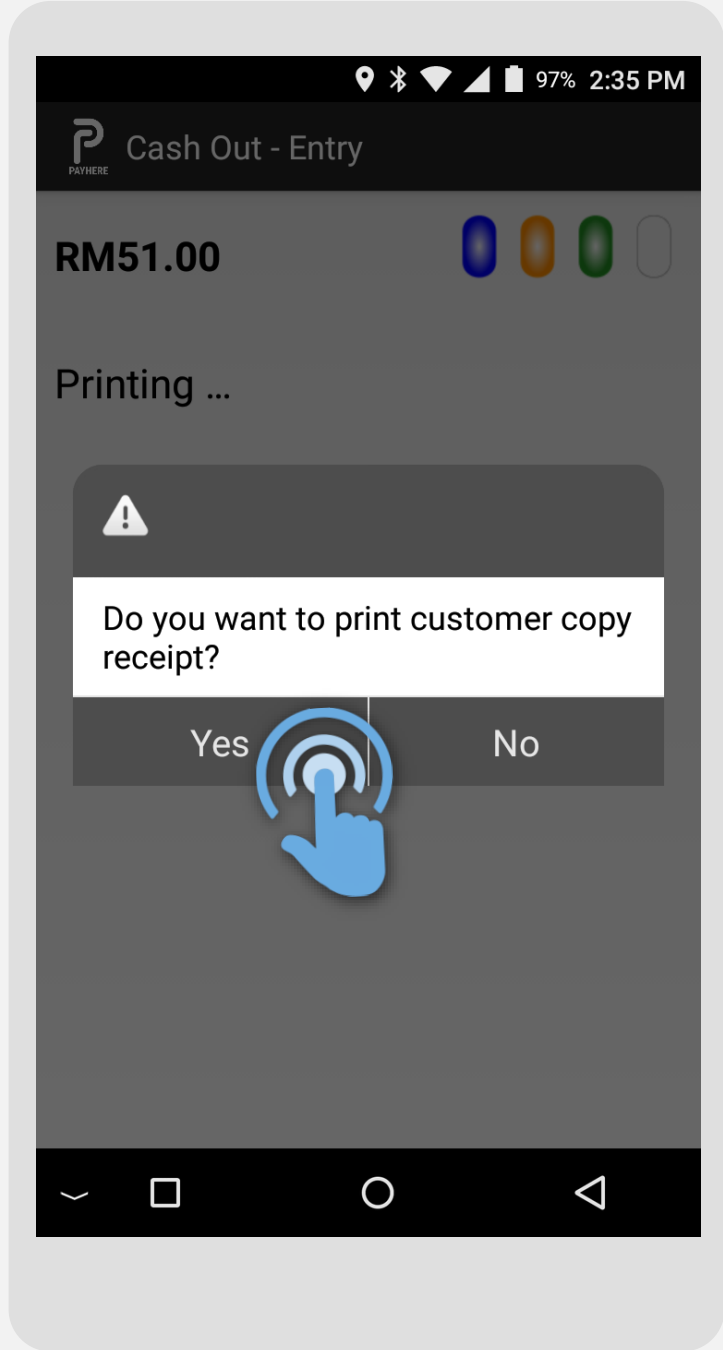


STEP
9
Select **Yes** for the customer copy receipt



STEP
10
Sample of Cash Out sale receipt


MyDebit CashOut | Void

 Terminal Model: Nexgo N86

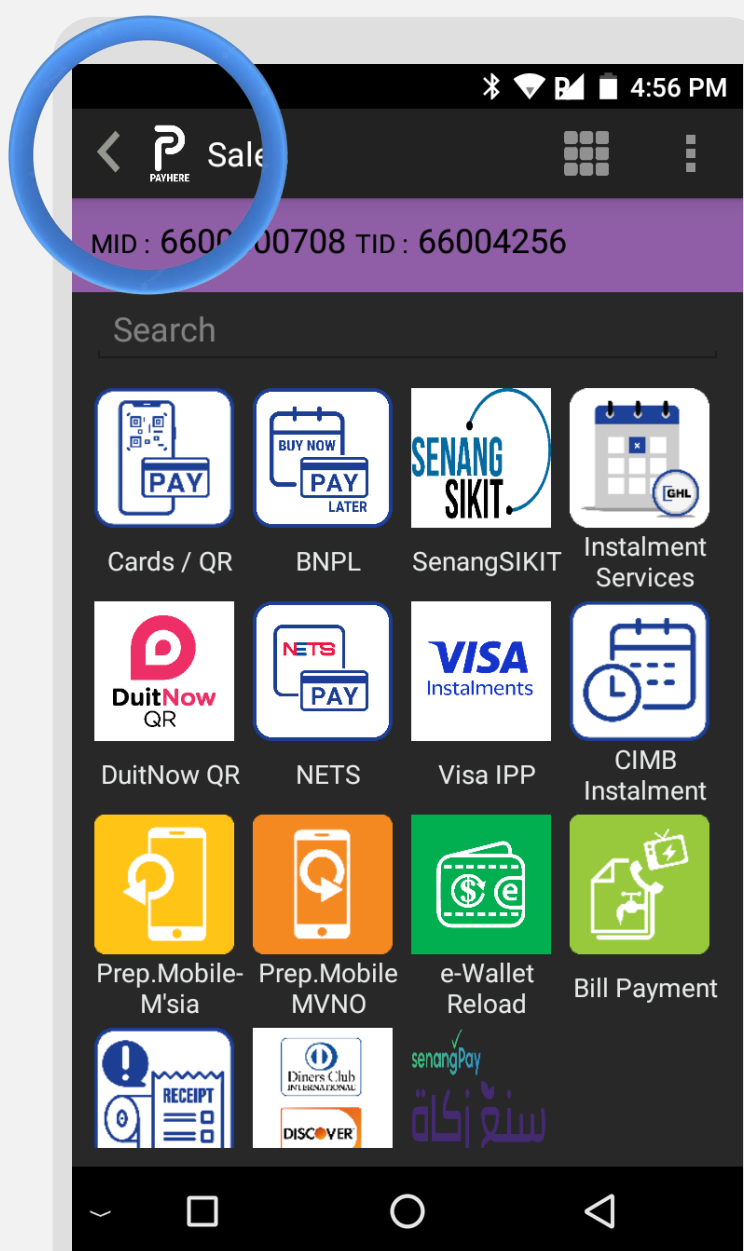


STEP
1

 Press on < icon to open side menu

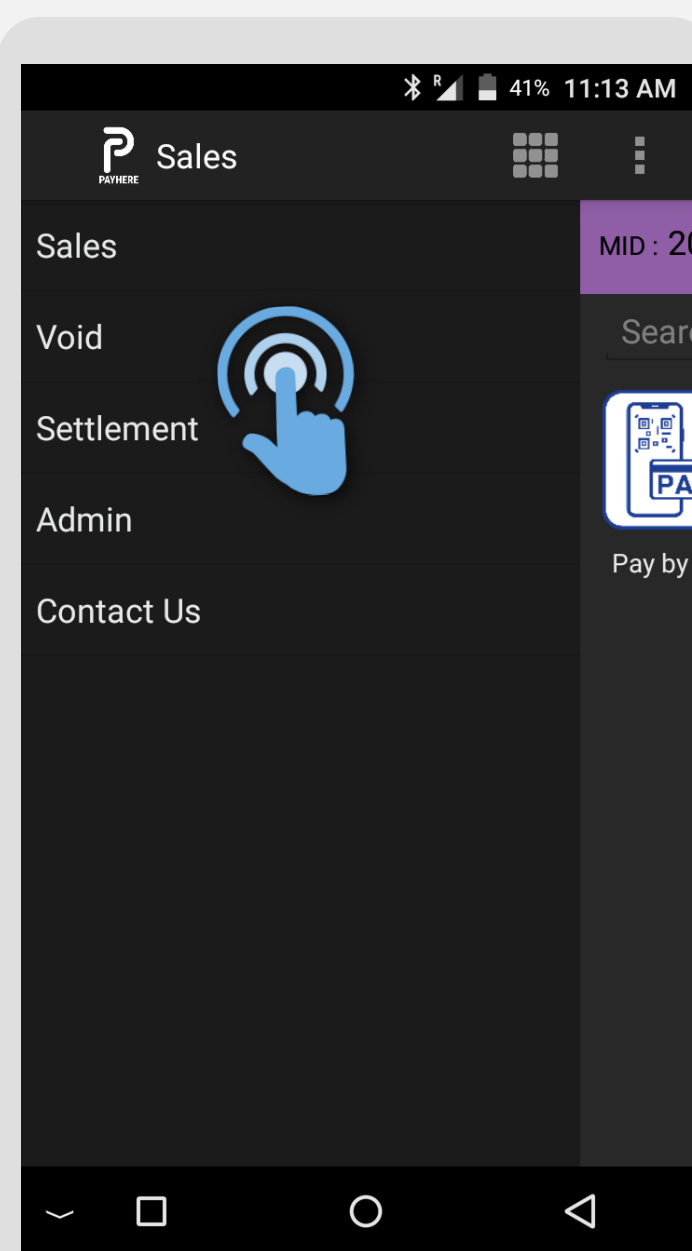


STEP
2

 Press on **Void**

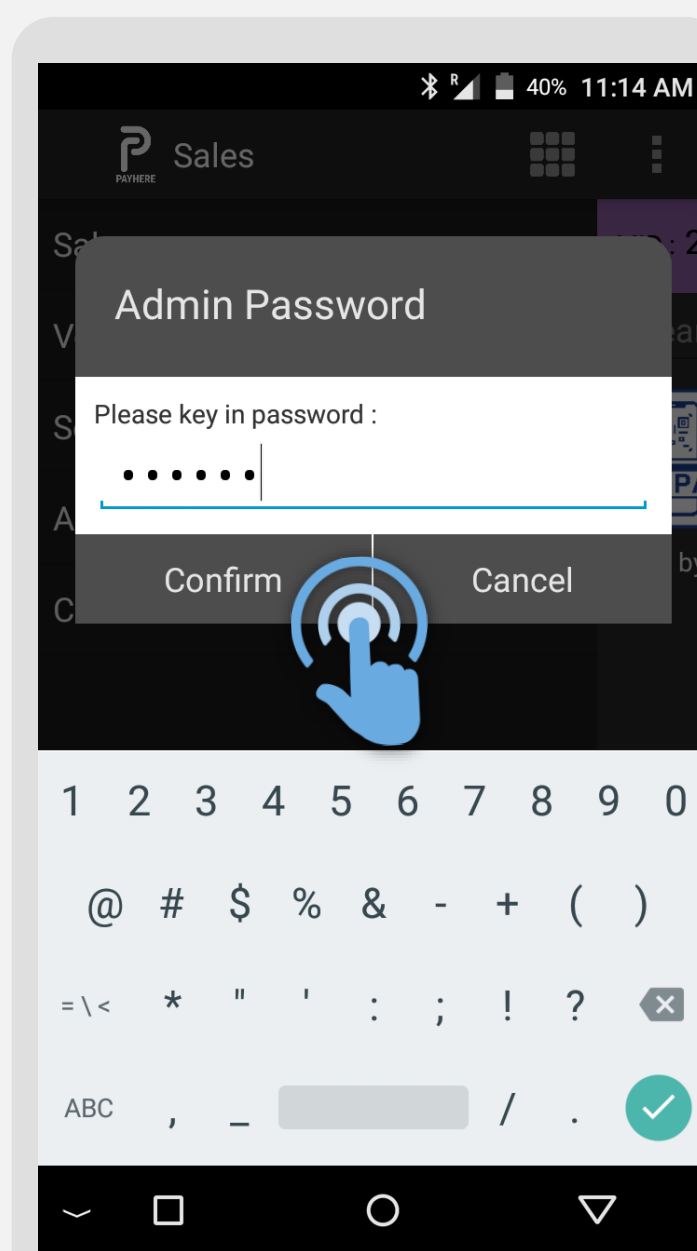


STEP
3

 Key-in Admin Password and press **Confirm**

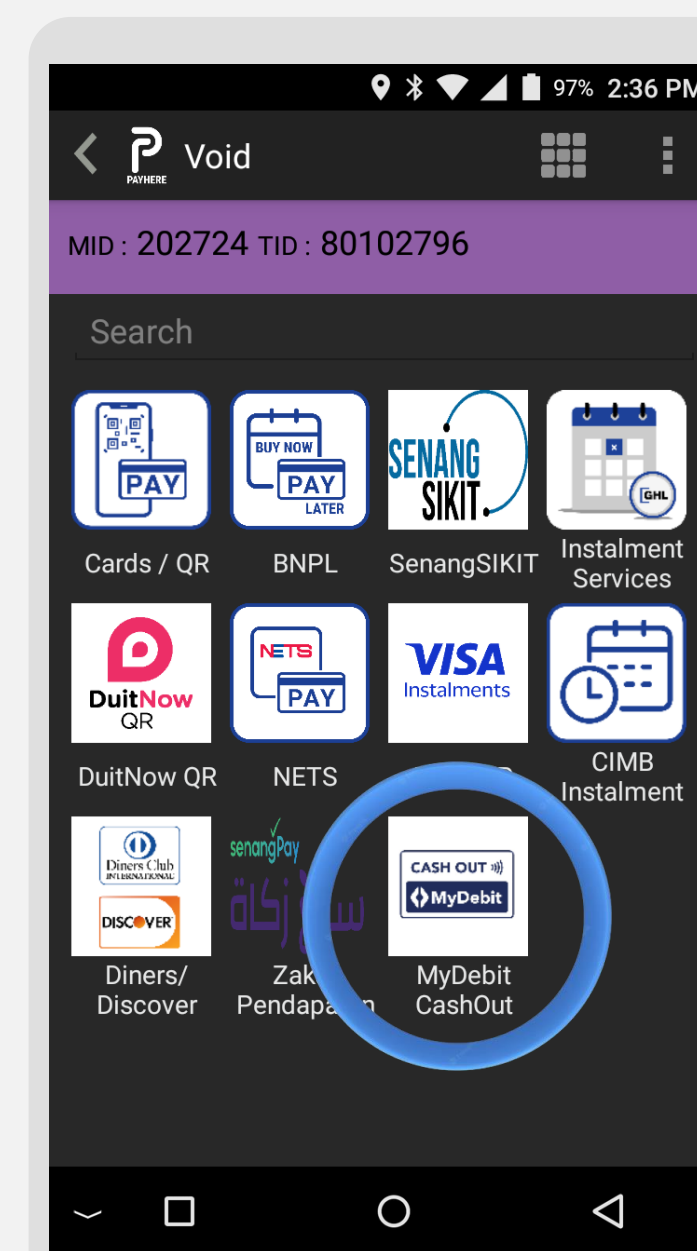

STEP
4

 Press on **MyDebit CashOut** icon

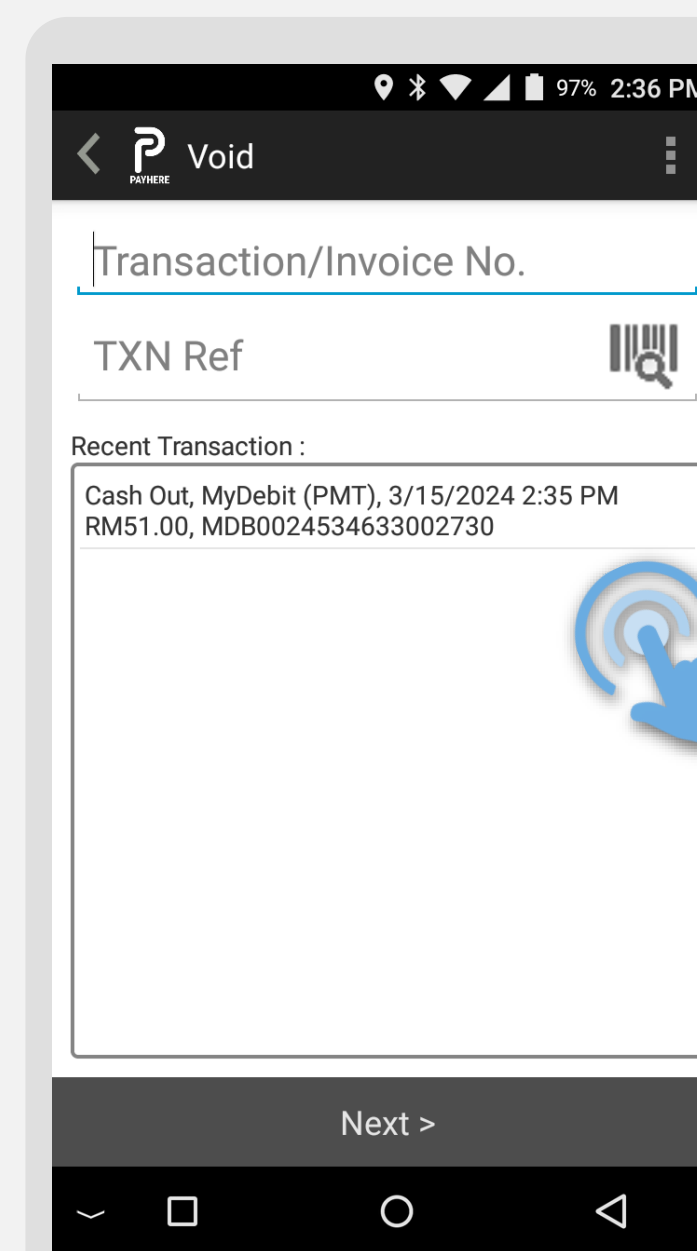


STEP
5

Select the sale transaction to void


MyDebit CashOut | Void

 Terminal Model: Nexgo N86

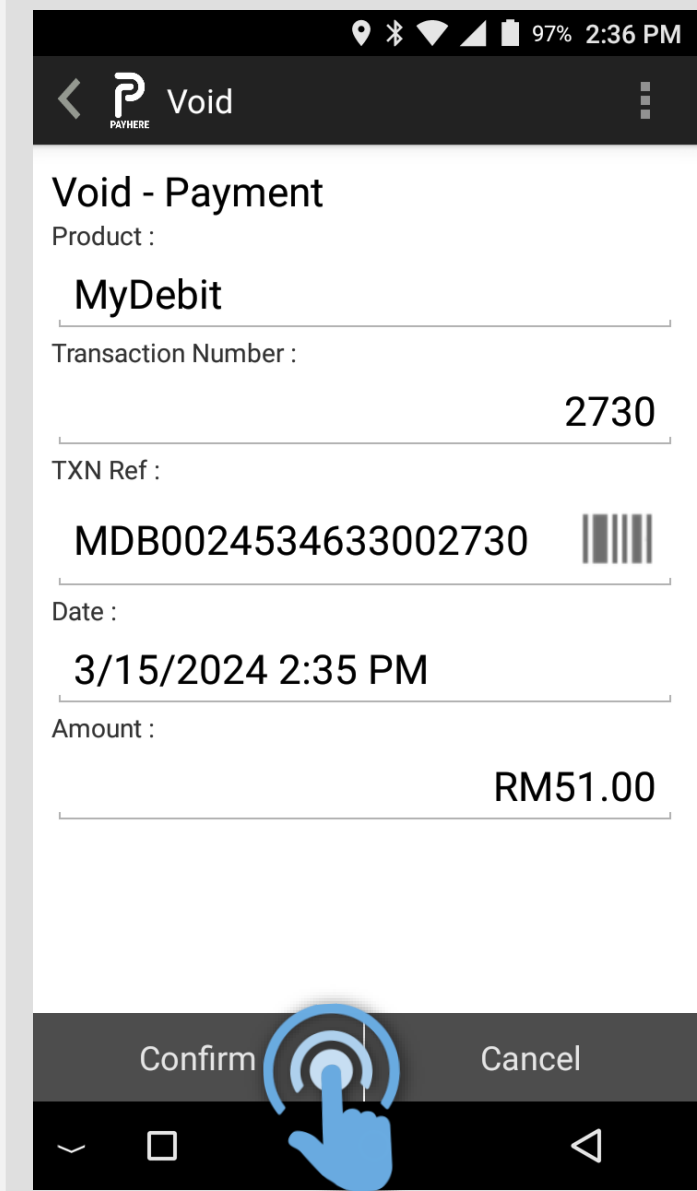


STEP
6

 Press **Confirm** to process void

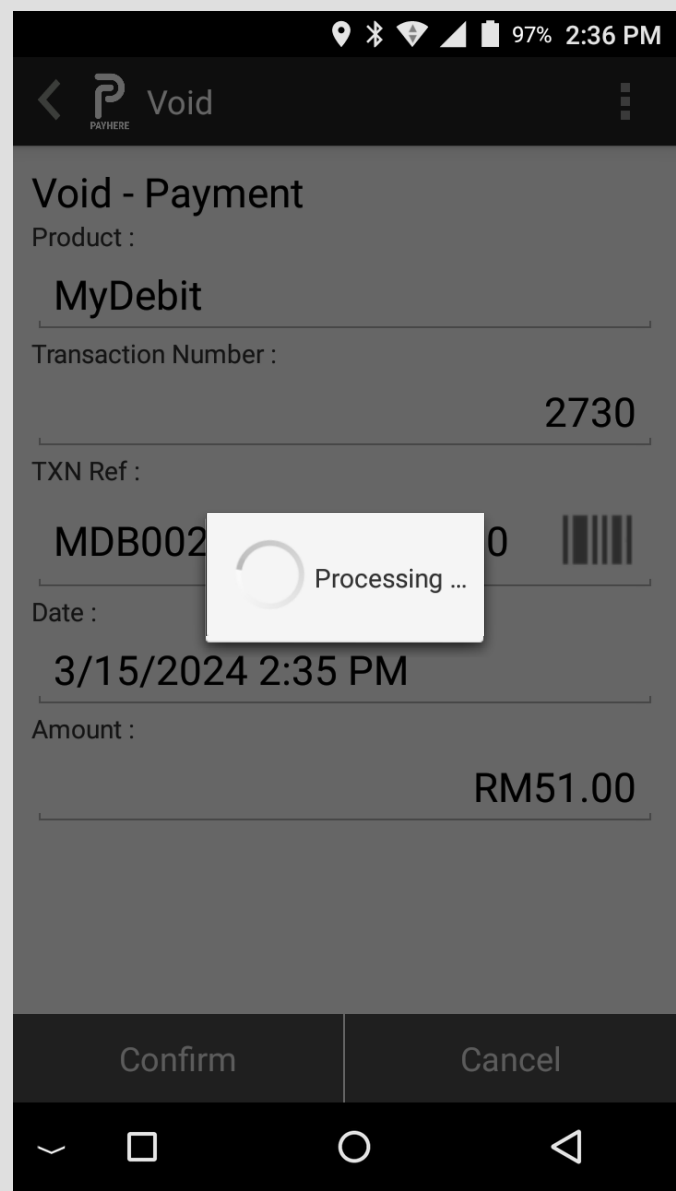

STEP
7

 Once void process is successful, merchant receipt will be printed

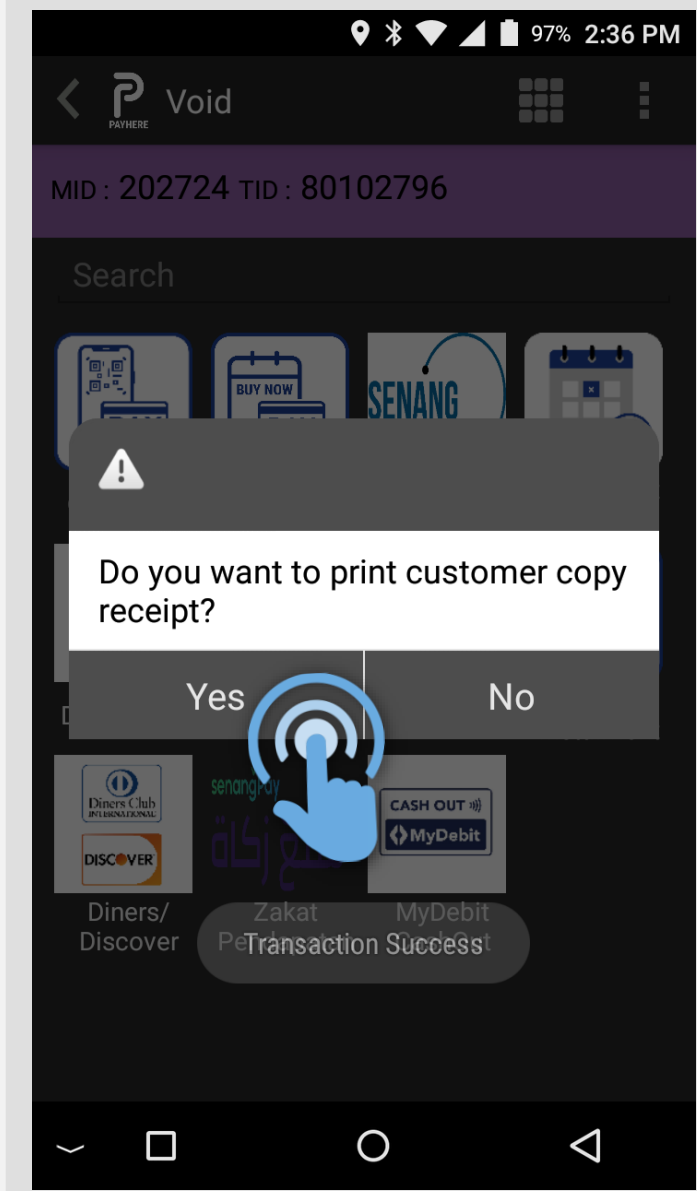

STEP
8

Press **Yes** to print the customer copy receipt



STEP
9

Sample of Cash Out void receipt